



BackStroke Start Ledge

Assembly Instructions

Australian Patent No. 2018903971


Anti Wave International Pty Ltd
Visit us online at www.anti.to

Anti Wave International Pty Ltd
Email : anton@anti.to
Web : www.anti.to



BackStroke Ledge Parts:


- A. BackStroke Ledge
- B. Marine Polyester Straps
- C. SS Cam Buckle Adjuster
- D. BackStroke Ledge End Caps (with Slots), fixed to the BackStroke Ledge.
- E. Stayputs and Eyelets (fixed to Nylon Strap)

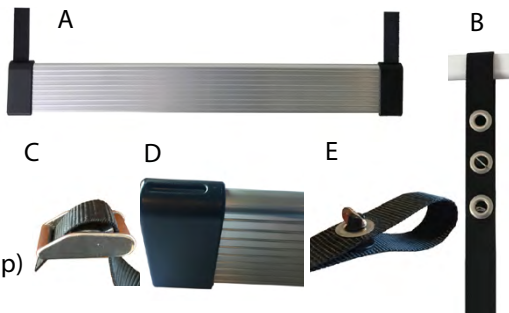

How to assemble:

1. Remove the SS Cam Buckle Adjusters from each of the Nylon Straps.
2. Feed the open Polyester Strap end through the End Cap Slot Holes (D), located on the top side of the BackStroke Ledge.
3. Re-attach the SS Cam Buckle Adjuster (C) to the Polyester Strap (B), and loop the excess Strap through the buckle.
4. Slide the SS Cam Adjuster (C) into the End Cap (D) as shown below. Repeat for the other side making sure that the lengths are the same.
5. Once attached to the blocks, adjust the length of Strap at the SS Cam Buckle to correct Ledge level, excess Strap can be tucked away inside the Ledge. See photos opposite.

Further installation details can be viewed at:
www.anti.to/allproducts/awe350-backstroke-start-ledge/

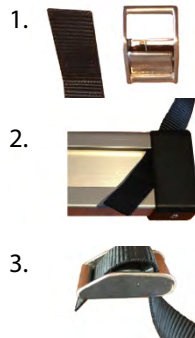

BackStroke Ledge Installation and Use

